

## **On-site instructions for precast Hollowcore flooring.**

### **Access**

It is the contractor's responsibility to provide suitable access to the site for the delivery vehicle and to provide an appropriate stacking area for the slabs. It is the contractor's responsibility to offload the vehicle with the appropriate machinery and lifting gear.

The delivery driver will satisfy himself that the offload will be safe and that he can drive to the appropriate area. The driver will not remove straps until the vehicle is stationary in the designated stacking area.

### **Storage**

The ground should be level and firm, preferably compacted hardcore or concrete. The slabs should be stacked with the timber bearers no more than 600mm from each end and in line with each other throughout the height of the stack.

Slabs of similar lengths should be stacked together and all slabs should be counted and checked for damage. Any discrepancies or damaged slabs should be reported immediately to our office on 023 8086 7000.


### **Delivery**

We have allowed a period of 1 hour to offload from arrival, £60 per 1 hour thereafter will be charged if delayed by site.

### **On-site handling**

The slabs should be installed with the appropriate machinery and lowered gently into position, avoiding any sudden impact which may cause damage.

Moving the slabs on-site should be done one at a time with the appropriate lifting equipment. Chains should be no more than 600mm from each end of the slab.

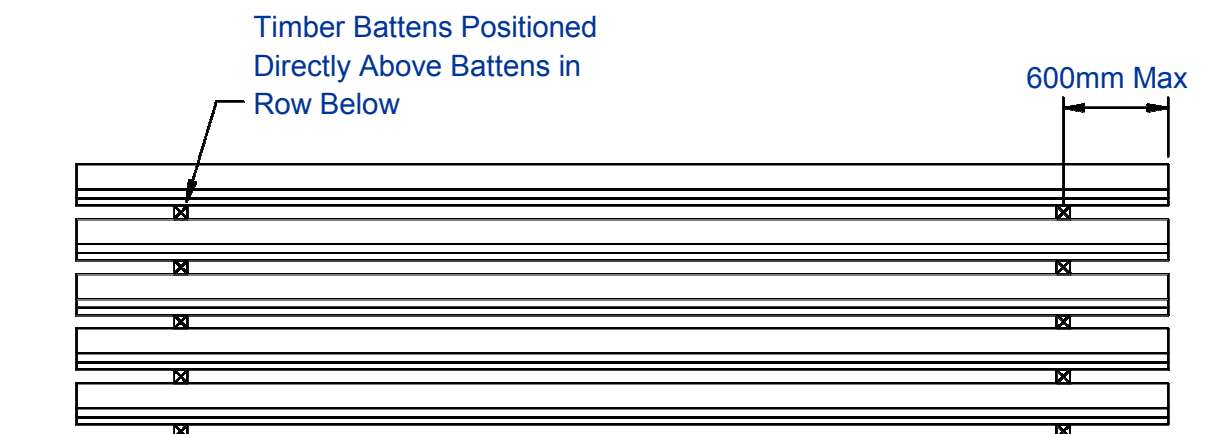

Ground Conditions will  
Effect Height of Stack